
Print Exit

1GR-FE EMISSION CONTROL CANISTER INSTALLATION

## **PROCEDURE**

## **■ 1.INSTALL CHARCOAL CANISTER ASSEMBLY**

77740

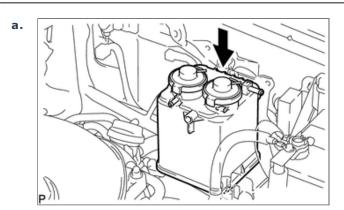

Install the charcoal canister assembly to the charcoal canister base bracket.

- **b.** Connect the No. 1 charcoal canister outlet hose to the charcoal canister assembly.
- **c.** Connect the fuel emission hose to the charcoal canister assembly and slide the clamp to secure the hose.
- **d.** Connect the No. 1 fuel vapor feed hose to the charcoal canister assembly and slide the clamp to secure the hose.

© 2012 TOYOTA MOTOR CORPORATION. All Rights Reserved.